





 








 



 
 
 




 







 
 
 
 
 
 

 
 
 
 

 
 

 

 
 
 
 
 
 
 
 
 


 








 
 


Original	Substituto	Original	Substituto
	Power		Power
	OK		OK
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	Return		BACK
	Play		Play
	Pause		Pause
	Extra		MEDIA
	Mute		MUTE
	Vol+		VOL +
	Vol-		VOL -
	Guide		-/- / EPG
	CH+		CH +
	CH-		CH -
	Home		VOD

Original	Substituto	Original	Substituto
	Source		SRC
	TTX/MIX		TEXT
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PRE-CH		P/C / FAV
	Exit		EXIT
	Info		INFO
	Menu		MENU
	Red		Red (A)





Original	Substituto	Original	Substituto
Green	 B	Green (B)	
Yellow	 C	Yellow (C)	
Blue	 D	Blue (D)	
123	 TV/R	TV/R	
Tools	 OPT+	OPT+	
Stop	 Stop	Stop	
Rec	 Rec	Rec	
<</ <<	 Rewind	Rewind	
>>/>>	 Fast Forward	Fast Forward	
CH List	 WIDE	WIDE	
AD/Subt.	 Subt.	Subt.	
E-Manual	 Audio	Audio	

