

 



























 

 

 

























 

 

 





 







































 



Original	Substituto
 Power	 Power
 123 / keypad	 Eject / Surround
 Extra	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Return	 Back / Return
 Vol Up	 Vol+
 Home / Hub	 Smart / List
 CH Up	 CH+ / Page+
 Vol Down	 Vol-
 CH Down	 CH- / Page-
 Play / Pause	 Shift + Play /
 Mute	 Mute / Dimmer
 Play	 Play / Slow

Original	Substituto
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 << / Tune-	 << / Tune-
 >> / Tune+	 >> / Tune+
 I<< / Preset-	 I<< / Preset-
 >>I / Preset+	 >>I / Preset+
 S.Mode	 Sound / Title
 AD	 Audio / Lang I/II
 AD / Subt.	 Subtitle / EQ
 Picture	 Picture / Format
 P.Size	 Zoom / Size
 Sleep	 Sleep / Timer
 Auto Prog	 TV/Radio /
 Tools	 Setup / OPT /
 TTX/MIX	 Text / Goto
 Source	 AV / Input / RDS





Original	Substituto	
Menu	 Menu / Home	
Info	 Info / Angle	
Exit	 Exit / Cancel / Clear	
CH List	 Display / Media	
1	 1	1
2	 2	2
3	 3	3
4	 4	4
5	 5	5
6	 6	6
7	 7	7
8	 8	8
9	 9	9
Guide	 Guide / EPG / -/--	
0	 0	0
Fav CH	 Fav / Marker / PC	
Search	 +  Shift + Yellow / YouTube / Repeat	

Original	Substituto	
Prime Video	 +  Shift + Blue / Prime	
Rakuten Tv	 +  Shift + Green / APP /	
Netflix	 +  Shift + Red / Netflix /	
Still	 +  Shift + Pause / Step /	
Dual I-II	 +  Shift + Audio / Lang I/II	
Add / Del	 +  Shift + Eject / Surround	
TV / DTV	 +  Shift + TV/Radio / Program	
E-Manual	 +  Shift + OK	
Media P.	 +  Shift + Display / Media	
-/--	 +  Shift + Guide / EPG / -/--	
PRE-CH	 +  Shift + Fav / Marker / PC	
Red	 Red / Netflix / Search	
Yellow	 Yellow / YouTube / Repeat	
Blue	 Blue / Prime Video / Random	
Green	 Green / APP / Repeat	

