 





 


 











Original	Substituto	Original	Substituto
 Power	 Power	 CH.LIST	 Smart / List
 Mute	 Mute / Dimmer	 PR+	 CH+ / Page+
 SUBT.	 Subtitle / EQ	 VOL-	 Vol-
 TV	 TV/Radio /	 PR-	 CH- / Page-
 Tools	 Setup / OPT /	 1	 1
 TTX/MIX	 Text / Goto	 2	 2
 Source	 AV / Input / RDS	 3	 3
 Menu	 Menu / Home	 4	 4
 Up	 Up	 5	 5
 Info	 Info / Angle	 6	 6
 Left	 Left	 7	 7
 Enter	 OK	 8	 8
 Right	 Right	 9	 9
 Exit	 Exit / Cancel / Clear	 GUIDE	 Guide / EPG / -/-
 Down	 Down	 0	 0
 PRE-CH	 Back / Return	 FAV.CH	 Fav / Marker / PC
 VOL+	 Vol+	 Red	 Red / Netflix / Search





Original	Substituto
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Enter	Shift + OK
Return	Shift + Back / Return

Original	Substituto

