









 

 

 
 












 
 


Original	Substituto	Original	Substituto
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TTX/MIX		Text / Goto
	0		0
	PRE-CH		Back / Return
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+

Original	Substituto	Original	Substituto
	Vol-		Vol-
	CH List		Shift + Smart / List
	CH List		Display / Media
	P-		CH- / Page-
	Menu		Menu / Home
	Smart Hub		Smart / List
	Guide		Guide / EPG / -/-
	Tools		Setup / OPT /
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Return		Shift + Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red/A		Red / Netflix / Search





Original	Substituto
 Green/B	 Green / APP / Repeat
 Yellow/C	 Yellow / YouTube / Repeat
 Blue/D	 Blue / Prime Video / Random
 E-Manual	 D.Menu / Top
 Sports	 TV/Radio /
 AD/SUBT	 Subtitle / EQ
 AD/SUBT	 Audio / Lang I/II
 Stop	 Stop / Hold
 <<<	 <<< / Tune-
 <<<	 <<< / Preset-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>>	 >>> / Tune+
 >>>	 >>> / Preset+

Original	Substituto

