



Original	Substituto
	Power
	Open/Close
	DVD
	USB
	HDMI Sel.
	Marker
	EZ View
	Video Sel.
	Repeat
	A-B Repeat
	Subtitle
	Disc Menu
	Title Menu
	Tv Source
	Audio
	Tv Vol+
	<<

Substituto	Substituto
	Power
	Eject / Surround
	2
	8
	0
	Fav / Marker / PC
	Display / Media
	4
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Subtitle / EQ
	D.Menu / Top
	Smart / List
	AV / Input / RDS
	Audio / Lang I/II
	Vol+
	<< / Tune-

Original	Substituto
	Info
	Pause
	TV CH+
	>>
	Tv Vol-
	I<<
	Stop
	Play
	>>I
	TV CH-
	Menu
	Up
	Return
	Left
	Enter
	Right
	Tools

Substituto	Substituto
	Info / Angle
	Pause / Step / Freeze
	CH+ / Page+
	>> / Tune+
	Vol-
	I<< / Preset-
	Stop / Hold
	Play / Slow
	>>I / Preset+
	CH- / Page-
	Menu / Home
	Up
	Back / Return
	Left
	OK
	Right
	Setup / OPT /



