



 





















 



 

 




 







 




 



 



 

 
 








 

 



 



 





 









Original	Substituto
 Power	 Power
 Tv/DTV	 TV/Radio /
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Pre-CH	 Back / Return
 Vol+	 Vol+
 PR+	 CH+ / Page+

Original	Substituto
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 PR-	 CH- / Page-
 Guide	 Guide / EPG / -/--
 Menu	 Menu / Home
 CH.List	 Smart / List
 Tools	 Setup / OPT /
 Up	 Up
 Return	 Shift + Back / Return
 Left	 Left
 Enter	 OK
 Right	 Right
 Info	 Info / Angle
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Substituto	Original	Substituto
	Yellow	 REPEAT A-B	Yellow / YouTube / Repeat
	Blue	 RANDOM	Blue / Prime Video / Random
	TTX/MIX		Text / Goto
	P.Size		Zoom / Size
	DMA		Display / Media
	E.Mode		D.Menu / Top
	3D		Shift + 3
	Subt.		Subtitle / EQ
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

Original	Substituto	Original	Substituto

