



 

 



 

 

 

 

 

 

 

 

 

 

 

 





Original	Substituto
 Power	 Power
 PowerTv	 Shift + Power
 Eject	 Eject / Surround
 TTX/MIX	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 DiscMenu	 D.Menu / Top
 0	 0
 TitleMenu/POPUP	 Sound / Title
 I<<	 I<< / Preset-

Original	Substituto
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Tv Vol+	 Vol+
 Tv Mute	 Mute / Dimmer
 Prog+	 CH+ / Page+
 Tv Vol-	 Vol-
 Tv Source	 AV / Input / RDS
 Prog-	 CH- / Page-
 CH List	 Shift + Smart / List
 Home	 Menu / Home
 Guide	 Guide / EPG / -/--
 Tools	 Setup / OPT /
 Up	 Up





Original	Substituto
Info	Info / Angle
Left	Left
OK	OK
Right	Right
Return	Back / Return
Down	Down
Exit	Exit / Cancel / Clear
Red/A	Red / Netflix / Search
Green/B	Green / APP / Repeat
Yellow/C	Yellow / YouTube / Repeat
Blue/D	Blue / Prime Video / Random
Smart HUB	Smart / List
Search	Shift + Red / Netflix /
3D	Picture / Format
E-Manual	Sleep / Timer
Web Browser	Display / Media
RecTV/List	Shift + Rec / Rec Mode

Original	Substituto
Rec	Rec / Rec Mode
Rec Pause	Shift + Pause / Step /



 





 





 

 

 







Original	Substituto
Power Tv	Power
TTX/MIX	Text / Goto
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+
Stop	Stop / Hold

Original	Substituto
Play	Play / Slow
Pause	Pause / Step / Freeze
Vol+	Vol+
Mute	Mute / Dimmer
Prog+	CH+ / Page+
Vol-	Vol-
Source	AV / Input / RDS
Prog-	CH- / Page-
CH List	Shift + Smart / List
Home	Menu / Home
Guide	Guide / EPG / -/-
Tools	Setup / OPT /
Up	Up
Info	Info / Angle
Left	Left
Enter	OK
Right	Right





Original	Substituto
 Return	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Smart Hub	 Smart / List
 Search	 Shift + Red / Netflix /
 3D	 Picture / Format
 Rec	 Rec / Rec Mode

Original	Substituto

