



Original	Substituto	Original	Substituto
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	PRE-CH		Pre Ch
	TV		TV/R
	CH.MGR		Smart
	Wiselink		Media
	Stop		Stop
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	P-		Ch -
	P+		Ch +
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok




 

 





 
Original	Substituto
[= ?]/Info	Info
[= +]/PIP	3D
TTX/MIX	Text
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
I-II/Dual	Dual
(O)/SRS	Back
Source (Green)	Shift + AV
PC	List
[▼]/STTL	Subt
[ <> ]/Size	Format
[= ♦ ]/P.Mode	Shift + Format
[= ]/S.Mode	Options
Sleep	Sleep
Power Cable	Shift + Power

Original	Substituto
1 Cable	Shift + 1
2 Cable	Shift + 2
3 Cable	Shift + 3
4 Cable	Shift + 4
5 Cable	Shift + 5
6 Cable	Shift + 6
7 Cable	Shift + 7
8 Cable	Shift + 8
9 Cable	Shift + 9
0 Cable	Shift + 0
P+ Cable	Shift + Ch +
P- Cable	Shift + Ch -










 



 



 

 









 



 





 



 

 





 

 












Original	Substituto	Original	Substituto
 Power	 Power	 Menu	 Menu
 1	 1	 Exit	 Exit
 2	 2	 Enter	 Ok
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 [≡?]/Info	 Info
 8	 8		
 9	 9		
 0	 0		
 TV	 TV/R		
 <<	 <<		
 Stop	 Stop		
 Play	 Play		
 Pause	 Pause		
 >>	 >>		

Original	Substituto	Original	Substituto
 MUTE	 MUTE	 TV	 AUX
 TV	 DVD	 SAT	 REC MODE
 >>>		 ■	 ●
 <<<	 <<	 >>>	 SETTINGS
 LIST	 DUAL	 SUBT	 OPT
 SLEEP	 TV/R	 PICTURE	 ECO
 D.MENU	 REPEAT	 ZOOM	 TIMER
 TEXT	 ▲	 AV	
 MENU	 ▲	 INFO	
 CLEAR	 OK	 RETURN	 BACK
 EXIT	 HOME	 SMART	 + CH
 +	 APP	 MEDIA	 -
 -	 1	 2	 3
 4	 5	 6	
 7	 8	 9	
 >>>	 GUIDE	 0	 PRE-CH
 A	 B	 C	 D
 www.mandis.tv			





Original	Substituto	Original	Substituto
 Power	 Power	 Stop	 Stop
 1	 1	 Play	 Play
 2	 2	 Pause	 Pause
 3	 3	 >>	 >>
 4	 4	 Menu	 Menu
 5	 5	 Exit	 Exit
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 Enter	 Ok
 PRE-CH	 Pre Ch	 [≡?]/Info	 Info
 TV	 TV/R	 [<>]/Size	 Format
 Sleep	 Sleep	 Source	 AV
 P+	 Ch +		
 P-	 Ch -		
 <<	 <<		

Original	Substituto	Original	Substituto
 Power	 Power	 Stop	 Stop
 1	 1	 Play	 Play
 2	 2	 Pause	 Pause
 3	 3	 >>	 >>
 4	 4	 Menu	 Menu
 5	 5	 Exit	 Exit
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 Enter	 Ok
 PRE-CH	 Pre Ch	 [≡?]/Info	 Info
 TV	 TV/R	 [<>]/Size	 Format
 Sleep	 Sleep	 Source	 AV
 P+	 Ch +		
 P-	 Ch -		
 <<	 <<		





Original	Substituto	Original	Substituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/R
	<<		<<
	Stop		Stop
	Play		Play
	Pause		Pause
	>>		>>

Original	Substituto	Original	Substituto
	P+		Ch +
	P-		Ch -
	Up		Up
	Enter		Ok
	Down		Down
	Right		Right
	Left		Left
	Menu		Menu
	Exit		Exit
	[≡?]/Info		Info

