



 

 

 

 




 
 





 
 








Original	Substituto
 DVD	 Shift + 2
 VCR	 Shift + 4
 Input Sel.	 AV / Input / RDS
 Standby / On	 Power
 Open / Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Angle	 Shift + Info / Angle
 0	 0
 Audio	 Audio / Lang I/II

Original	Substituto
 I<<	 I<< / Preset-
 F.ADV / Skip	 Fav / Marker / PC
 Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 Play	 Play / Slow
 >>	 >> / Tune+
 PROG/TRK +	 CH+ / Page+
 PROG/TRK -	 CH- / Page-
 Menu	 Menu / Home
 Up	 Up
 Return	 Back / Return
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down





Original	Substituto	Original	Substituto
Title List / Disc Menu	D.Menu / Top		
Info	Info / Angle		
Playlist / Title Menu	Smart / List		
Anykey	Yellow / YouTube / Repeat		
Subtitle	Subtitle / EQ		
TV / VCR	Display / Media		
REC	Rec / Rec Mode		
Rec Speed	Setup / OPT /		
Cancel	Exit / Cancel / Clear		
Timer Rec	Sleep / Timer		
Copy To DVD	Red / Netflix / Search		
Copy To VCR	Green / APP / Repeat		

Original	Substituto





	Original	Substituto		Original	Substituto
	TV Standby/On		Power		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	Vol+		Vol+		
	TV Mute		Mute / Dimmer		
	Prog. +		CH+ / Page+		
	Vol-		Vol-		
	Prog. -		CH- / Page-		

