



Original	Substituto
Power	Power
Clock	Sleep / Timer
Preset	Setup / OPT /
VPS	Smart / List
1	1
2	2
3	3
Prog	TV/Radio /
4	4
5	5
6	6
+	CH+ / Page+
7	7
8	8
9	9
-	CH- / Page-
CL	Menu / Home

Original	Substituto
O/AV	AV / Input / RDS
O/AV	0
OK	OK
ATR	D.Menu / Top
TV/VCR	Display / Media
Index	Info / Angle
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
Stop	Stop / Hold
Pause / Still	Pause / Step / Freeze
Rec	Rec / Rec Mode
Reset	Exit / Cancel / Clear
Memory	Text / Goto

