








Original	Substituto
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
Nicam	Shift + Audio / Lang I/II
4	4
5	5
6	6
Recall/Goto	Back / Return
Recall/Goto	Shift + Text /
7	7
8	8
9	9
0	0
TV Menu	Menu / Home
Up	Up

Original	Substituto
Source	AV / Input / RDS
Left	Left
Enter	OK
Right	Right
Exit	Exit / Cancel / Clear
Down	Down
Display	Display / Media
Vol+	Vol+
Sound	Sound / Title
CH+	CH+ / Page+
Vol-	Vol-
Pic	Picture / Format
CH-	CH- / Page-
Sleep	Sleep / Timer
Aspect	Shift + Picture / Format
DVD/DVB Setup	Setup / OPT /
DVD Source	Shift + AV / Input / RDS





Original	Substituto
	Fav  Fav / Marker / PC
	Text  Text / Goto
	Info  Info / Angle
	EPG  Guide / EPG / -/-
	Return / Index  Shift + Back / Return
	Title / Size  Shift + Sound / Title
	Title / Size  Zoom / Size
	Angle / Hold  Shift + Stop /
	PBC / Subcode  TV/Radio /
	Repeat / Reveal  Shift + Green / APP /
	Play/Pause  Play / Slow
	Stop  Stop / Hold
	Open/Close  Eject / Surround
	Red / <<  << / Tune-
	Red / <<<  Red / Netflix / Search
	Green / >>>  >> / Tune+
	Green / >>>  Green / APP / Repeat

Original	Substituto
	Yellow / I<<<  I<<< / Preset-
	Yellow / I<<<  Yellow / YouTube / Repeat
	Blue / >>>I  >>>I / Preset+
	Blue / >>>I  Blue / Prime Video / Random
	DVD Menu  D.Menu / Top
	Audio  Audio / Lang I/II
	Subtitle  Subtitle / EQ
	DVD Display  Shift + Display / Media
	Rec  Rec / Rec Mode
	Rec List  Smart / List
	PVR Info  Shift + Info / Angle
	PIP  Shift + Smart / List

