



 
 

 



 

 






 




 
 



 






 








 

 




Original		Substituto		Original		Substituto	
	POWER		Power		REPEAT/GREEN/▼		Green / APP / Repeat
	INFO		Info / Angle		7		7
	HDMI CONTROL		Smart / List		8		8
	SLEEP		Sleep / Timer		9		9
	SCREEN		Picture / Format		ROOT/YELLOW		Yellow / YouTube / Repeat
	SOURCE		AV / Input / RDS		RETURN		Back / Return
	PRESETS		Setup / OPT /		0		0
	1		1		MENU		Menu / Home
	2		2		TITLE/BBLUE		Sound / Title
	3		3		TITLE/BBLUE		Blue / Prime Video / Random
	ZOOM/RED/▲		Zoom / Size		UP		Up
	ZOOM/RED/▲		Shift + CH+ /		LEFT		Left
	ZOOM/RED/▲		Red / Netflix / Search		OK/SELECT		OK
	4		4		RIGHT		Right
	5		5		DOWN		Down
	6		6		P+		CH+ / Page+
	REPEAT/GREEN/▼		Shift + CH- /		P-		CH- / Page-

Page-



