



Original	Substituto
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	TV
	0
	Recall
	V+
	Mute
	P+

Substituto	Original
	Power
	AV / Input / RDS
	1
	2
	3
	4
	5
	6
	7
	8
	9
	TV/Radio /
	0
	Fav / Marker / PC
	Vol+
	Mute / Dimmer
	CH+ / Page+

Original	Substituto
	V-
	World/Internet
	P-
	Menu
	Q.Menu
	Up
	Left
	OK
	Right
	Down
	Back
	Exit
	i
	Music/Camera
	TV Guide
	*/O
	*/Q

Substituto	Original
	Vol-
	Smart / List
	CH- / Page-
	Menu / Home
	D.Menu / Top
	Up
	Left
	OK
	Right
	Down
	Back / Return
	Exit / Cancel / Clear
	Info / Angle
	Display / Media
	Guide / EPG / -/-
	Shift + 1
	Shift + 2





Original	Substituto
 [=]/Text	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Lang	 Audio / Lang I/II
 [=]..	 Sound / Title
 [-O-]	 Setup / OPT /
 <<	 << / Tune-
	 Pause / Step / Freeze
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 ▶	 Play / Slow
 ■	 Stop / Hold

Original	Substituto

