



Original	Substituto	Original	Substituto
	Power		Power
	I/II/I-II/II/O		Dual
	Backlight		Smart
	Rotate		Media
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Mute		Mute
	Input Up		>>
	Input Down		<<
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	End		Exit

Original	Substituto	Original	Substituto
	Menu		Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	[≡]		Text
	[≡?]		Guide
	[≡+]		Format
	[...]		Subt
	Red		Red





Original	Substituto	Original	Substituto
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[≡o]		TV/R

