



| Original  | Substituto | Original  | Substituto        |
|---|------------|---|-------------------|
|    | Power      |    | Power             |
|    | Source     |    | AV / Input / RDS  |
|    | 1          |    | 1                 |
|    | 2          |    | 2                 |
|    | 3          |    | 3                 |
|    | 4          |    | 4                 |
|    | 5          |    | 5                 |
|    | 6          |    | 6                 |
|    | 7          |    | 7                 |
|   | 8          |   | 8                 |
|  | 9          |  | 9                 |
|  | TV         |  | TV/Radio /        |
|  | 0          |  | 0                 |
|  | Recall     |  | Fav / Marker / PC |
|  | V+         |  | Vol+              |
|  | Mute       |  | Mute / Dimmer     |
|  | P+         |  | CH+ / Page+       |

| Original  | Substituto     | Original  | Substituto            |
|---|----------------|---|-----------------------|
|    | V-             |    | Vol-                  |
|    | World/Internet |    | Smart / List          |
|    | P-             |    | CH- / Page-           |
|    | Menu           |    | Menu / Home           |
|    | Q.Menu         |    | D.Menu / Top          |
|    | Up             |    | Up                    |
|    | Left           |    | Left                  |
|    | OK             |    | OK                    |
|    | Right          |    | Right                 |
|   | Down           |   | Down                  |
|  | Back           |  | Back / Return         |
|  | Exit           |  | Exit / Cancel / Clear |
|  | i              |  | Info / Angle          |
|  | Music/Camera   |  | Display / Media       |
|  | TV Guide       |  | Guide / EPG / -/-     |
|  | */O            |  | Shift + 1             |
|  | */Q            |  | Shift + 2             |



