



 





Original	Substituto	Original	Substituto
	Power		Power
	TV/VCR		TV/Radio /
	DVD	+	Shift + 2
	PR+		CH+ / Page+
	1		1
	2		2
	3		3
	PR-		CH- / Page-
	4		4
	5		5
	6		6
	Vol+		Vol+
	7		7
	8		8
	9		9
	Vol-		Vol-
	0/AV		0

Original	Substituto	Original	Substituto
	0/AV		AV / Input / RDS
	Info		Info / Angle
	Setup / Menu		Setup / OPT /
	Setup / Menu		Menu / Home
	Mute		Mute / Dimmer
	Up		Up
	Left		Left
	Enter/[≡]		OK
	Enter/[≡]		Text / Goto
	Right		Right
	DVD Menu		D.Menu / Top
	Down		Down
	Cancel/[≡♦]		Exit / Cancel / Clear
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	TRK/Skip-/I<<		I<< / Preset-





Original	Substituto
 TRK/Skip-/>>	 >>  / Preset+
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Rec/Otr	 Rec / Rec Mode
 Time Rec	 Shift + Sleep / Timer
 Index/[≡☺]/[≡□]	 Smart / List
 II>	 Shift + Pause / Step / Step
 Repeat	 Yellow / YouTube / Repeat
 Repeat	 Shift + TV/Radio / Program
 Jump/[≡+]/SP/LP	 Picture / Format
 Angle/00:00:00	 Shift + Info / Angle
 Subtitle/Zero	 Subtitle / EQ
 Zoom/[≡?]	 Zoom / Size
 Title/ATR	 Sound / Title
 Return	 Back / Return
 Play Mode/P→P	 Display / Media
 Timer	 Sleep / Timer

Original	Substituto
 Audio	 Audio / Lang I/II
 Eject	 Shift + Eject / Surround
 Open/Close	 Eject / Surround

