




 

 







 
 
 
 

 
 

 
 
 

 
 

 
 
 




Original	Substituto	Original	Substituto
	Power		Power
	Eject		Shift + Eject
	Open/Close		Eject
	Display Call		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AV		0
	Channel+		Ch +
	Channel-		Ch -
	Showview/Progra		Guide
	Timer Rec		AV
	Rec OTR		Rec
	Marker/Tape		Options
	Jump/Zero Return		Pre Ch
	Clock/Counter		Yellow
	Counter Reset		Green
	Tv/VCR		TV/R
	VCR		Smart
	DVD		Media
	Setup Menu		Menu
	DVD Menu		D. Menu
	Up		Up
	Down		Down
	Right/TRK+		Right
	Left/TRK-		Left
	Enter/Select		Ok
	Title		Red





Original	Substituto	Original	Substituto
 Return	 Back		
 Stop	 Stop		
 Play	 Play		
 Pause	 Pause		
 I<</- Index/Skip	 I<<		
 <<	 <<		
 >>	 >>		
 >>I/Skip/Index +	 >>I		
 I>/Slow	 Blue		
 Cancel	 Exit		
 Repeat A-B	 Text		
 Zoom	 3D		
 Angle	 List		
 Play Mode	 +  Shift + Play		
 Subtitle	 Subt		
 Audio	 Dual		

