


 



 



 
 
 

 








 




 
 
 

 






 






 





 
 

 

 
 
 

 
 








Original	Substituto	Original	Substituto
 Power	 Power	 Guide	 Guide
 Mute	 Mute	 i	 Info
 NTSC / PAL	 Format	 Menu	 Menu
 Audio	 Dual	 Up / CH+	 Up
 TV / Radio	 AV	 Down / CH-	 Down
 1	 1	 Right / Vol+	 Right
 2	 2	 Left / Vol-	 Left
 3	 3	 OK	 Ok
 4	 4	 Up / CH+	 Ch +
 5	 5	 Down / CH-	 Ch -
 6	 6	 Right / Vol+	 Vol +
 7	 7	 Left / Vol-	 Vol -
 8	 8	 ↑	 Shift + Ch +
 9	 9	 ↓	 Shift + Ch -
 0	 0	 Exit	 Exit
 TV / Radio	 TV/R	 FAV	 Pre Ch
 Recall	 Back	 SAT	 Smart





	Original	Substituto	Original	Substituto
	<<	<<		
	Play	PLAY MODE		
	>>	>>		
	> <	+ Shift + Stop		
	>	+ Shift + Pause		
	Pause	Pause		
	Stop	Stop		
	<	<< <		
	>	>> >		
	Rec	REC MODE		
	Red	A		
	Green	B		
	Yellow	C		
	Blue	D		
	Text	TEXT		
	Subtitle	SUBT		

