











 

| Original | Substituto |
|---|---|
|  |  AV / Input / RDS |
|  |  Power |
|  |  Shift + OK |
|  |  Zoom / Size |
|  |  Shift + Smart / List |
|  |  << / Tune- |
|  |  Play / Slow |
|  |  >> / Tune+ |
|  |  Shift + D.Menu / Top Menu |
|  |  I<< / Preset- |
|  |  Stop / Hold |
|  |  >>I / Preset+ |
|  |  Shift + Setup / OPT / Tools |
|  |  Picture / Format |
|  |  Shift + Menu / |
|  |  D.Menu / Top |
|  |  Shift + Display / Media |

| Original | Substituto |
|---|---|
|  |  Exit / Cancel / Clear |
|  |  Display / Media |
|  |  Smart / List |
|  |  Fav / Marker / PC |
|  |  Guide / EPG / -/- |
|  |  Right |
|  |  Info / Angle |
|  |  Up |
|  |  OK |
|  |  Left |
|  |  Back / Return |
|  |  Down |
|  |  Setup / OPT / |
|  |  Menu / Home |
|  |  Red / Netflix / Search |
|  |  Green / APP / Repeat |
|  |  Yellow / YouTube / Repeat |





| Original | Substituto |
|--|---|
|  Blue |  Blue / Prime Video / Random |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  [=]/Text |  Text / Goto |
|  0 |  0 |
|  [...] |  Subtitle / EQ |
|  Vol+ |  Vol+ |
|  Prog+ |  CH+ / Page+ |
|  Mute |  Mute / Dimmer |
|  Audio |  Audio / Lang I/II |

| Original | Substituto |
|---|---|
|  Vol- |  Vol- |
|  Prog- |  CH- / Page- |





 

 









 









 

 

 

 





| Original | Substituto | | |
|----------|------------|---|----------------|
| | Power | | Power |
| | <</< | | << / Tune- |
| | Play | | Play / Slow |
| | >>/ > | | >> / Tune+ |
| | Stop | | << / Preset- |
| | Stop | | Stop / Hold |
| | >> | | >> / Preset+ |
| | Top Menu | | D.Menu / Top |
| | Menu | | Menu / Home |
| | Right | | Right |
| | [i+]/Info | | Info / Angle |
| | Up | | Up |
| | Left | | Left |
| | Return | | Back / Return |
| | Down | | Down |
| | Home | + | Shift + Menu / |
| | 1 | | 1 |

| Original | Substituto | | |
|----------|------------|--|-------------------|
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | 0 | | 0 |
| | [...] | | Subtitle / EQ |
| | Prog+ | | CH+ / Page+ |
| | Audio | | Audio / Lang I/II |
| | Prog- | | CH- / Page- |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |



 

 





 









 





 

 











 



 

 













 





 

 



| Original | Substituto |
|--|---|
|  Power |  Power |
|  <</< |  << / Tune- |
|  Play |  Play / Slow |
|  >>/ > |  >> / Tune+ |
|  I<< |  I<< / Preset- |
|  Stop |  Stop / Hold |
|  >> |  >> / Preset+ |
|  Top Menu |  D.Menu / Top |
|  Menu |  Menu / Home |
|  Right |  Right |
|  [i+]/Info |  Info / Angle |
|  Up |  Up |
|  OK |  OK |
|  Left |  Left |
|  Return |  Back / Return |
|  Down |  Down |
|  Options |  Setup / OPT / |

| Original | Substituto |
|--|---|
|  Home |  Shift + Menu / |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  [≡]/Text |  Text / Goto |
|  0 |  0 |
|  [...] |  Subtitle / EQ |





| Original | Substituto | Original | Substituto |
|---|------------|---|-------------------|
|  | Source |  | AV / Input / RDS |
|  | Power |  | Power |
|  | <</<I |  | << / Tune- |
|  | Play |  | Play / Slow |
|  | >>/I> |  | >> / Tune+ |
|  | I<< |  | I<< / Preset- |
|  | Stop |  | Stop / Hold |
|  | >>I |  | >>I / Preset+ |
|  | Top Menu |  | D.Menu / Top |
|  | Menu |  | Menu / Home |
|  | Right |  | Right |
|  | [i+]/Info |  | Info / Angle |
|  | Up |  | Up |
|  | OK |  | OK |
|  | Left |  | Left |
|  | Return |  | Back / Return |
|  | Down |  | Down |
|  | Home |  | Shift + Menu / |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | [≡]/Text |  | Text / Goto |
|  | 0 |  | 0 |
|  | [...] |  | Subtitle / EQ |
|  | Vol+ |  | Vol+ |
|  | Mute |  | Mute / Dimmer |
|  | Audio |  | Audio / Lang I/II |
|  | Vol- |  | Vol- |

