











 

Original	Substituto
 Source	 AV / Input / RDS
 Power Tv	 Power
 [+]	 Shift + OK
 3D	 Zoom / Size
 Theatre	 Shift + Smart / List
 <</<	 << / Tune-
 Play	 Play / Slow
 >>/ >	 >> / Tune+
 Sync Menu	 Shift + D.Menu / Top Menu
 <<	 << / Preset-
 Stop	 Stop / Hold
 >>	 >> / Preset+
 ?/i-Manual	 Shift + Setup / OPT / Tools
 Scene	 Picture / Format
 BD/DVD Top	 Shift + Menu /
 BD/DVD Menu	 D.Menu / Top
 Digital/Analog	 Shift + Display / Media

Original	Substituto
 Exit	 Exit / Cancel / Clear
 Internet Widgets	 Display / Media
 Internet Video	 Smart / List
 ♥/FAV	 Fav / Marker / PC
 Guide	 Guide / EPG / -/-
 Right	 Right
 [i+]/Info	 Info / Angle
 Up	 Up
 OK	 OK
 Left	 Left
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Home	 Menu / Home
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat





Original	Substituto
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [≡]/Text	 Text / Goto
 0	 0
 [...]	 Subtitle / EQ
 Vol+	 Vol+
 Prog+	 CH+ / Page+
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II

Original	Substituto
 Vol-	 Vol-
 Prog-	 CH- / Page-



 







 


 












 

 

 


 

 



 

 

 







 



 







 







Original	Substituto
 Power	 Power
 <</<	 << / Tune-
 Play	 Play / Slow
 >>/ >	 >> / Tune+
 <<	 << / Preset-
 Stop	 Stop / Hold
 >>	 >> / Preset+
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Right	 Right
 [i+]/Info	 Info / Angle
 Up	 Up
 Left	 Left
 Return	 Back / Return
 Down	 Down
 Home	 Shift + Menu /
 1	 1

Original	Substituto
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [...]	 Subtitle / EQ
 Prog+	 CH+ / Page+
 Audio	 Audio / Lang I/II
 Prog-	 CH- / Page-



 


Original	Substituto	Original	Substituto
 Power	 Power	 Home	 Shift + Menu /
 <</<	 << / Tune-	 Red	 Red / Netflix / Search
 Play	 Play / Slow	 Green	 Green / APP / Repeat
 >>/ >	 >> / Tune+	 Yellow	 Yellow / YouTube / Repeat
 <<	 << / Preset-	 Blue	 Blue / Prime Video / Random
 Stop	 Stop / Hold	 1	 1
 >>	 >> / Preset+	 2	 2
 Top Menu	 D.Menu / Top	 3	 3
 Menu	 Menu / Home	 4	 4
 Right	 Right	 5	 5
 [i+]/Info	 Info / Angle	 6	 6
 Up	 Up	 7	 7
 OK	 OK	 8	 8
 Left	 Left	 9	 9
 Return	 Back / Return	 [≡]/Text	 Text / Goto
 Down	 Down	 0	 0
 Options	 Setup / OPT /	 [...]	 Subtitle / EQ





Original	Substituto
	 Source / AV / Input / RDS
	 Power
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 I<< / Preset-
	 Stop / Hold
	 >>I / Preset+
	 Top Menu / D.Menu / Top
	 Menu / Home
	 Right
	 [i+]/Info / Info / Angle
	 Up
	 OK
	 Left
	 Return / Back / Return
	 Down

Original	Substituto
	 Home / Shift + Menu /
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 [≡]/Text / Text / Goto
	 0
	 [...] / Subtitle / EQ
	 Vol+
	 Mute / Dimmer
	 Audio / Lang I/II
	 Vol-

