

 
 


 







 








 

 


 

 







Original	Substituto
 Input	 AV / Input / RDS
 Power	 Power
 Track ID	 Zoom / Size
 I<<	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 ?/i-Manual	 D.Menu / Top
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 3D	 Shift + Display / Media
 [+]	 Picture / Format
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 Digital/Analog	 Shift + Smart / List
 Exit	 Exit / Cancel / Clear
 Scene	 Smart / List

Original	Substituto
 Internet Video	 Display / Media
 Sync Menu	 Shift + Menu /
 Guide	 Guide / EPG / -/-
 Up	 Up
 [i+]/[?]	 Info / Angle
 Return/Back	 Back / Return
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Options	 Setup / OPT /
 Home	 Menu / Home
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1





	Original	Substituto	Original	Substituto
	2	DVD 2		
	3	CD - STB 3		
	4	VIDEO 4		
	5	TAPE 5		
	6	TUNER 6		
	7	AUX - HDD 7		
	8	USB 8		
	9	BLUETOOTH 9		
	[≡]	GOTO TEXT		
	0	HDMI - SAT 0		
	[...]	EQ SUBTITLE		
	Mute	DIMMER MUTE		
	Vol+	VOL +		
	Prog/CH+	CH PAGE +		
	Vol-	VOL -		
	Audio	LANG I/II AUDIO		
	Prog/CH-	CH PAGE -		

