

 
 

 

 
 
 


 

 



 
 


 



 

 



 
 
 
 


 
 
 

 
 
 

 
 
 
 
 
 

 
 
 

 




 









Original	Substituto	Original	Substituto
 Power	 Power	 Audio	 Dual
 Open / Close	 Eject	 Clear	 Exit
 HDD	 Smart	 Red	 Red
 DVD	 Media	 Green / Subtitle	 Green
 Prog +	 Ch +	 Green / Subtitle	 Subt
 Prog -	 Ch -	 Yellow / Angle	 Yellow
 Input	 AV	 Yellow / Angle	 Format
 1	 1	 Blue / Play Mode	 Blue
 2	 2	 Blue / Play Mode	 Shift + Play
 3	 3	 System Menu	 D. Menu
 4	 4	 Title List / Top Menu	 Shift + Menu
 5	 5	 Title List / Top Menu	 List
 6	 6	 Guide	 Guide
 7	 7	 Menu	 Menu
 8	 8	 TV / DVD	 TV/R
 9	 9	 Info	 Info
 0	 0	 Up	 Up





Original	Substituto
	 Right
	 Down
	 Left
	 Ok
	 Back
	 Shift + Info
	 I<<
	 Shift + Left
	 Shift + Right
	 >>I
	 <<
	 Play
	 >>
	 Shift + Pause
	 Pause
	 Stop
	 Rec

Original	Substituto
	 Shift + Stop
	 Shift + Smart
	 Shift + Rec
	 Vol +
	 Vol -
	 Shift + Ch +
	 Shift + Ch -
	 Shift + Power
	 Shift + AV

