 

 

 

 

 

 

 

 



 

 



 
 












Original	Substituto
 Sleep	 Sleep / Timer
 Standby AV	 Shift + Power
 System Standby	 Power
 Video1	 Shift + 4
 Video 2	 Shift + 1
 DVD	 Shift + 2
 MD/Tape	 Shift + 5
 CD	 Shift + 3
 Tuner	 Shift + 6
 Top Menu	 Shift + D.Menu / Top Menu
 1 Tuner	 1
 Up	 Up
 2 Tuner	 2
 DVD Menu	 D.Menu / Top
 3 Tuner	 3
 Left	 Left
 4 Tuner	 4

Original	Substituto
 Enter	 OK
 5 Tuner	 5
 Right	 Right
 6 Tuner	 6
 7 Tuner	 7
 Down	 Down
 8 Tuner	 8
 Recall	 Fav / Marker / PC
 9 Tuner	 9
 >10 Tuner/Shift/-/-	 Guide / EPG / -/-
 0 Tuner	 0
 Enter/D.Tuning/Return Tuner	 Back / Return
 I<</CH/Preset-	 I<< / Preset-
 I<</CH Preset-Tuner	 Shift + I<< / Preset-
 >>I/CH/Preset+	 >>I / Preset+
 >>I/CH Preset+ Tuner	 Shift + >>I / Preset+
 Tv/Video/ANT	 AV / Input / RDS





Original	Substituto	Original	Substituto
	<<		<< / Tune-
	>>		>> / Tune+
	D.Skip/TV/VTR		TV/Radio /
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	2CH		Sound / Title
	A.F.D.		Eject / Surround
	Movie/Music		Audio / Lang I/II
	Test Tone		Subtitle / EQ
	Main Menu		Menu / Home
	Multi CH		Picture / Format
	< Menu		Shift + Left
	Menu >		Shift + Right
	Muting		Mute / Dimmer
	-		CH- / Page-
	+		CH+ / Page+

Original	Substituto	Original	Substituto
	Master Vol+		Vol+
	Tv Vol+		Shift + Vol+
	Tv CH+		Shift + CH+ /
	Master Vol-		Vol-
	Tv Vol-		Shift + Vol-
	Tv CH-		Shift + CH- /





 

 

 
 




 

 

 

 

 







 

 



 

Original	Substituto
 Standby	 Power
 Video 1	 Shift + 4
 Video 2	 Shift + 1
 DVD	 Shift + 2
 MD/Tape	 Shift + 5
 CD	 Shift + 3
 Tuner	 Shift + 6
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 >10/Shift/-/-	 Guide / EPG / -/-

Original	Substituto
 0	 0
 Enter/D.Tuning/Return	 Back / Return
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 D.Skip/TV/VTR	 TV/Radio /
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Muting	 Mute / Dimmer
 Master Vol+	 Vol+
 Master Vol-	 Vol-





Original	Substituto
 Standby CD	 Power
 Standby Video	 Shift + Power
 Video 1	 Smart / List
 Video 2	 Display / Media
 DVD	 Blue / Prime Video / Random
 MD/Tape	 Green / APP / Repeat
 CD	 Yellow / YouTube / Repeat
 Tuner	 Red / Netflix / Search
 1 CD	 1
 1 Video 1	 Shift + 1
 2 CD	 2
 2 Video 1	 Shift + 2
 3 CD	 3
 3 Video 1	 Shift + 3
 4 CD	 4
 4 Video 1	 Shift + 4
 5 CD	 5

Original	Substituto
 5 Video 1	 Shift + 5
 6 CD	 6
 6 Video 1	 Shift + 6
 7 CD	 7
 7 Video 1	 Shift + 7
 8 CD	 8
 8 Video 1	 Shift + 8
 9 CD	 9
 9 Video 1	 Shift + 9
 >10/Shift/-/ CD	 Guide / EPG / -/-
 >10/Shift/-/ Video 1	 Shift + Guide / EPG / -/-
 0 CD	 0
 0 Video 1	 Shift + 0
 Enter/D.Tuning/Return CD	 Back / Return
 Enter/D.Tuning/Return Video 1	 Shift + Back / Return
 I<< CD	 I<< / Preset-
 I<< Video 1	 Shift + I<< / Preset-





**Original**

**Substituto**

 >>I CD	 >>I / Preset+
 >>I Video 1	 +  Shift + >>I / Preset+
 << CD	 << / Tune-
 << Video 1	 +  Shift + << /
 >> CD	 >> / Tune+
 >> Video 1	 +  Shift + >> /
 D.Skip/TV/VTR CD	 TV/Radio /
 D.Skip/TV/VTR Video 1	 +  Shift + TV/Radio / Program
 Play CD	 Play / Slow
 Play Video 1	 +  Shift + Play /
 Pause CD	 Pause / Step / Freeze
 Pause Video 1	 +  Shift + Pause / Step /
 Stop CD	 Stop / Hold
 Stop Video 1	 +  Shift + Stop /
 Muting	 Mute / Dimmer
 Master Vol+	 Vol+
 Master Vol-	 Vol-

**Original**

**Substituto**






Original	Substituto
Standby	Power
Standby Video	+  Shift + Power
Video 1	Smart / List
Video 2	Display / Media
DVD	Blue / Prime Video / Random
MD/Tape	Green / APP / Repeat
CD	Yellow / YouTube / Repeat
Tuner	Red / Netflix / Search
1 MD/Tape	1
1 Video 2	+  Shift + 1
2 MD/Tape	2
2 Video 2	+  Shift + 2
3 MD/Tape	3
3 Video 2	+  Shift + 3
4 MD/Tape	4
4 Video 2	+  Shift + 4
5 MD/Tape	5

Original	Substituto
5 Video 2	+  Shift + 5
6 MD/Tape	6
6 Video 2	+  Shift + 6
7 MD/Tape	7
7 Video 2	+  Shift + 7
8 MD/Tape	8
8 Video 2	+  Shift + 8
9 MD/Tape	9
9 Video 2	+  Shift + 9
>10/Shift/-/- MD/Tape	Guide / EPG / -/-
>10/Shift/-/- Video 2	+  Shift + Guide / EPG / -/-
0 MD/Tape	0
0 Video 2	+  Shift + 0
Enter/D.Tuning/Return MD/Tape	Back / Return
Enter/D.Tuning/Return Video 2	+  Shift + Back / Return
I<< MD/Tape	I<< / Preset-
I<< Video 2	+  Shift + I<< / Preset-





Original	Substituto
 >>  MD/Tape	 >>  / Preset+
 >>  Video 2	 Shift + >>  / Preset+
 << MD/Tape	 << / Tune-
 << Video 2	 Shift + << /
 >> MD/Tape	 >> / Tune+
 >> Video 2	 Shift + >> /
 D.Skip/TV/VTR MD/Tape	 AV / Input / RDS
 D.Skip/TV/VTR Video 2	 Shift + AV / Input / RDS
 Play MD/Tape	 Play / Slow
 Play Video 2	 Shift + Play /
 Pause MD/Tape	 Pause / Step / Freeze
 Pause Video 2	 Shift + Pause / Step /
 Stop MD/Tape	 Stop / Hold
 Stop Video 2	 Shift + Stop /
 Muting	 Mute / Dimmer
 Master Vol+	 Vol+
 Master Vol-	 Vol-

Original	Substituto

