


 

 
 

 



 

 

 
 

 

 
 
 
 
 
 


 










Original	Substituto
 Power	 Power
 Input	 AV
 Power Tv	 Shift + Power
 Input Tv	 Shift + AV
 Tv Vol+	 Shift + Vol +
 Tv Vol-	 Shift + Vol -
 Tv CH+	 Shift + Ch +
 Tv CH-	 Shift + Ch -
 Sound Field +	 Ch +
 Sound Field -	 Ch -
 STD	 Options
 Movie	 Dual
 Game	 Media
 Music	 List
 P.Audio	 Smart
 Stereo	 Subt
 Speaker/Tv↔Audi	 TV/R

Original	Substituto
 Display	 Info
 Return	 Back
 AMP Menu	 Menu
 Vol+	 Vol +
 Vol-	 Vol -
 Muting	 Mute
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 I<<	 I<<
 Pause	 Pause
 >>I	 >>I
 <<	 <<
 Play	 Play
 >>	 >>





Original	Substituto	Original	Substituto
	Stop		Stop
	Pairing		Pre Ch

Original	Substituto

