

 

 
 

 


 
 




 



 







 



 
 

 






Original	Substituto	Original	Substituto
 Power	 Power	Enter	 Pre Ch
 TV	 TV/R	Clear	 Exit
Open / Close	 Eject	Function	 Smart
 System Menu	 Shift + Menu	Tone	 Media
Sleep	 Sleep	 Sound Field	 Dual
TV Input	 AV	 DVD Top Menu	 Menu
 Display	 Info	 DVD Menu	 D. Menu
 1	 1	 Up	 Up
 2	 2	 Down	 Down
 3	 3	 Right	 Right
 4	 4	 Left	 Left
 5	 5	 OK	 Ok
 6	 6	 Return	 Back
 7	 7	 I<< / Preset -	 I<<
 8	 8	 ← / <II Step	 Shift + Left
 9	 9	 → / Step II>	 Shift + Right
 0	 0	 >>I / Preset +	 >>I





Original	Substituto	Original	Substituto
<< / Tuning - / <	<<		
Play	Play		
>> / Tuning + /	>>		
Repeat	Text		
Pause	Pause		
Stop	Stop		
Muting	Mute		
Volume +	Vol +		
Volume -	Vol -		

