


 







 

 

 

 













 












 

 






 




 
 


Original	Substituto	Original	Substituto
	Power		Power
	Audio		Dual
	[+]		Format
	Digital		Media
	Analog		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[≡]		Text
	Recall		Pre Ch
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	[i+]		Info
	Menu/Home		Menu
	Return/Exit		Exit
	Return/Exit		Back
	CH+		Ch +
	CH-		Ch -
	Tools/Options		Options
	[:≡]		Guide





Original	Substituto
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

Original	Substituto
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	







	Original	Substituto	Original	Substituto
	Stop			
	<<			
	>>			
	↑ ·			
	· →			





Original	Substituto
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	



















 
 


 
 


 
 




 






 

 


 
 



 


 


 



 
 


 
 
 


Original	Substituto
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	









Original	Substituto	Original	Substituto
 Power	 Power	 Display	 Info
 Source	 AV	 Mute	 Mute
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	 Menu/Home	 Media
 4	 4	 Return/Exit	 Back
 5	 5	 Up	 Up
 6	 6	 OK	 Ok
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 Play	 Play
 Clear	 Exit	 Stop	 Stop
 Enter	 Pre Ch	 Pause	 Pause
 Theatre	 Smart	 >>/Tuning+	 >>
 Sound Field	 Dual	 <</Tuning-	 <<
 AMP Menu	 Menu	 >>I/Preset+	 >>I





Original	Substituto	Original	Substituto
I<</Preset-	I<<		
·→	Ch +		
←·	Ch -		
DMPort	Options		
Video	Shift + 1		
BD	Shift + 3		
DVD	Shift + 4		
SAT	Shift + 5		
TV	Shift + 6		
Tuner/Band	Shift + 8		

Original	Substituto

