





 



 

















 

 



 











 

 

 

 
 

 




 

 

 












 









Original	Substituto	Original	Substituto
	Power		Power
	TV/VTR		Zoom / Size
	Eject		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide / EPG / -/--
	Prog+		CH+ / Page+
	Prog-		CH- / Page-
	Vol+		Vol+

Original	Substituto	Original	Substituto
	Vol-		Vol-
	Play		Play / Slow
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Index Search >>I		>>I / Preset+
	I<< Index Search		<< / Tune-
	X2		Smart / List
	Search >>		I<< / Preset-
	<< Search		>> / Tune+
	Skip		Display / Media
	Wheel >/Frame		Shift + >>I / Preset+
	< Wheel/<		Shift + << /
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Menu		Menu / Home





Original	Substituto	Original	Substituto
Execute	 OK		OK
 Audio Monitor	 LANG I/II  AUDIO		Audio / Lang I/II
Time Clear	 CLEAR  EXIT  CANCEL		Exit / Cancel / Clear
Auto/Manu	 SURROUND		Eject / Surround
Tracking Normal/Slow ▼	 SHIFT +  CH PAGE -		Shift + CH- /
Tracking Normal/Slow ▲	 SHIFT +  CH PAGE +		Shift + CH+ /
Input Select	 RDS AV INPUT		AV / Input / RDS
Counter Reset	 RETURN BACK		Back / Return
Display	 ANGLE INFO		Info / Angle
Tape Speed SP/LP	 TIMER SLEEP		Sleep / Timer
Rec	 REC MODE		Rec / Rec Mode
Quick Timer	 PROGRAM TV/RADIO		TV/Radio /
Still Adjust I> Slow+	 SHIFT + 		Shift + Right
Still Adjust I> Slow-	 SHIFT + 		Shift + Left
VPS/PDC	 EQ SUBTITLE		Subtitle / EQ
Showview	 OPT-TOOLS SETUP		Setup / OPT /
Timer Check	 SHIFT +  RDS AV INPUT		Shift + AV / Input / RDS

Original	Substituto	Original	Substituto
Once	 NETFLIX SEARCH		Red / Netflix / Search
Daily	 APP REPEAT		Green / APP / Repeat
Weekly	 YouTube REPEAT A-B		Yellow / YouTube / Repeat





Original	Substituto
Power	Power
Display	Info / Angle
TV/VTR	Zoom / Size
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Guide / EPG / -/--
Vol+	Vol+
Vol-	Vol-
Prog+	CH+ / Page+

Original	Substituto
Prog-	CH- / Page-
Audio Monitor	Audio / Lang I/II
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
[≡]	Setup / OPT /
[]	Smart / List

