 

 

 

 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 
 
 


 





 

 
 
 

 




 






 
 
 
 
 
 
 
 
 

 

 

 
 




| Original   | Substituto  |
|--|---|
|  Power      |  Power           |
|  Eject/Auto |  Eject           |
|  Mute       |  Mute            |
|  1          |  1               |
|  2          |  2               |
|  3          |  3               |
|  4          |  4               |
|  5          |  5               |
|  6          |  6               |
|  7          |  7               |
|  8         |  8              |
|  9        |  9             |
|  0        |  0             |
|  -/--     |  Shift + Guide |
|  Recall   |  Pre Ch        |
|  Vol+     |  Vol +         |
|  Vol-     |  Vol -         |

| Original   | Substituto   |
|--|--|
|  Aspect           |  Format           |
|  Audio            |  Dual             |
|  CH+              |  Ch +             |
|  CH-              |  Ch -             |
|  Display          |  Info             |
|  Up               |  Up               |
|  Right            |  Right            |
|  Down             |  Down             |
|  Left             |  Left             |
|  OK               |  Ok               |
|  LCD Menu        |  Menu            |
|  DVD Setup/Exit |  Exit           |
|  DVD Setup/Exit |  Options        |
|  Input          |  AV             |
|  P.Mode         |  Shift + Format |
|  S.Mode         |  Shift + Dual   |
|  Sleep          |  Sleep          |



