



 



 



 
 






 







 



 













 
 
 
 
 





 



 
 
 









Original	Substituto	Original	Substituto
 Power	 Power	 Info	 Info
 Mute	 Mute	 EPG	 Guide
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 Ok
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Menu	 Menu
 7	 7	 Exit	 Exit
 8	 8	 Vol +	 Vol +
 9	 9	 Vol -	 Vol -
 0	 0	 P +	 Shift + Ch +
 TV / R	 TV/R	 List	 List
 Home	 Smart	 P -	 Shift + Ch -
 FAV	 Pre Ch	 CH +	 Ch +
 Back	 Back	 CH -	 Ch -
 Audio	 Dual	 OPT	 Options

Original	Substituto	Original	Substituto
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 TV	 DUAL	 DUAL
 SAT	 SAT	 AUX	 AUX
 PLAY MODE	 PLAY MODE	 REC MODE	 REC MODE
 FF	 FF	 STOP	 STOP
 PAUSE	 PAUSE	 PLAY	 PLAY
 RR	 RR	 FF	 FF
 LEFT	 LEFT	 RIGHT	 RIGHT
 RIGHT	 RIGHT	 LEFT	 LEFT
 OK	 OK	 OK	 OK
 LEFT	 LEFT	 RIGHT	 RIGHT
 DOWN	 DOWN	 UP	 UP
 UP	 UP	 DOWN	 DOWN
 MENU	 MENU	 MENU	 MENU
 EXIT	 EXIT	 EXIT	 EXIT
 VOL +	 VOL +	 VOL +	 VOL +
 VOL -	 VOL -	 VOL -	 VOL -
 P +	 P +	 P +	 P +
 LIST	 LIST	 LIST	 LIST
 P -	 P -	 P -	 P -
 CH +	 CH +	 CH +	 CH +
 CH -	 CH -	 CH -	 CH -
 OPT	 OPT	 OPT	 OPT





Original	Substituto	Original	Substituto
 Text	 Text		
 SUB	 Subt		
 Message	 Format		
 Pause	 Pause		
 <<	 <<		
 >>	 >>		
 Rec	 Rec		
 Play	 Play		
 <<	 <<		
 >>	 >>		
 Stop	 Stop		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

