



 
 











Original	Substituto	Original	Substituto
 Power	 Power	 Yellow	 Yellow / YouTube / Repeat
 Source	 AV / Input / RDS	 Menu	 Menu / Home
 Picture	 Picture / Format	 0	 0
 Sound	 Sound / Title	 Exit	 Exit / Cancel / Clear
 Still	 Pause / Step / Freeze	 Blue	 Blue / Prime Video / Random
 Mute	 Mute / Dimmer	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 Red	 Red / Netflix / Search	 Down	 Down
 4	 4	 CH -	 CH- / Page-
 5	 5	 CH +	 CH+ / Page+
 6	 6	 Vol -	 Vol-
 Green	 Green / APP / Repeat	 Vol +	 Vol+
 7	 7	 Guide / Size	 Guide / EPG / -/--
 8	 8	 Index / Subtitle	 Subtitle / EQ
 9	 9	 Sleep	 Sleep / Timer

Original	Substituto	Original	Substituto
 Power	 MUTE	 SHIFT	 TV
 Source	 DVD	 SAT	 AUX
 Picture	 SLOW	 STEP - FREEZE	 HOLD
 Sound	 TUNE-	 TUNE+	 PRESET-
 Still	 PRESET+	 PRESET-	 PRESET+
 Mute	 TITLE	 LANG	 EQ
 1	 SOUND	 SUBTITLE	 SURROUND
 2	 FORMAT	 SIZE	 TIMER
 3	 PICTURE	 TIMER	 PROGRAM
 4	 ZOOM	 SLEEP	 TV RADIO
 5	 TOP MENU	 GOTO	 RDS
 6	 OPT-TOOLS	 TEXT	 AV INPUT
 7	 D.MENU	 SETUP	 HOME
 8	 SETUP	 TEXT	 ANGLE
 9	 MENU	 INFO	 MENU
 Red	 OK	 OK	 RETURN
 4	 EXIT	 BACK	 CLEAR
 5	 CANCEL	 LIST	 SMART
6	 VOL+	 MEDIA	 DISPLAY
7	 VOL-	 CH PAGE	 CH PAGE
8	 TV	 DVD	 CD - STB
9	 DVD	 TAPE	 TUNER
0	 VIDEO	 USB	 BLUETOOTH
1	 AUX - HDD	 HDMI - BAT	 PC
2	 GUIDE EPG	 FAV MARKER	 SEARCH
3	 NETFLIX	 APP	 REPEAT
4	 APP	 YouTube	 REPEAT A-B
5	 YouTube	 Prime Video	 RANDOM
6	 Prime Video	 RANDOM	
7			





Original	Substituto
Text	Text / Goto
FAV / Sub Code	Fav / Marker / PC
TV / Reveal	TV/Radio /
Comp / Mix	Display / Media
Language	Audio / Lang I/II
Cancel	+ Shift + Exit / Cancel / Clear
Info	Info / Angle
Recall	Back / Return
Zoom	Zoom / Size
I / II	+ Shift + Audio / Lang I/II

Original	Substituto

