
 

 

 

 

 

 
 
 
 
 

 





Original	Substituto	Original	Substituto
 Power	 Power	 OK	 OK
 Mute	 Mute / Dimmer	 Right	 Right
 Play	 Play / Slow	 Exit	 Exit / Cancel / Clear
 Pause	 Pause / Step / Freeze	 Down	 Down
 <<	 << / Tune-	 Recall	 Back / Return
 >>	 >> / Tune+	 Vol+	 Vol+
 I<<	 I<< / Preset-	 Auto	 Smart / List
 >>I	 >>I / Preset+	 CH+	 CH+ / Page+
 Lan/Audio	 Audio / Lang I/II	 Vol-	 Vol-
 Subtitle	 Subtitle / EQ	 CH-	 CH- / Page-
 Zoom	 Zoom / Size	 1	 1
 Tv/Radio	 TV/Radio /	 2	 2
 Text	 Text / Goto	 3	 3
 Menu	 Menu / Home	 4	 4
 Up	 Up	 5	 5
 Info	 Info / Angle	 6	 6
 Left	 Left	 7	 7





Original		Substituto	
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0
	FAV		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original		Substituto	

