
 
 





 
 






 



 

 

 






 



















 
 
 


 


 



 

 
 

 
 


 

 

 






 


 

 
 


 
 

Original	Substituto	Original	Substituto
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 Up / CH + / I<<	 Up
 3	 3	 Down / CH - / >>I	 Down
 4	 4	 Right / Vol +	 Right
 5	 5	 Left / Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 Up / CH + / I<<	 I<<
 8	 8	 Down / CH - / >>I	 >>I
 9	 9	 Up / CH + / I<<	 Ch +
 0	 0	 Down / CH - / >>I	 Ch -
 FAV	 Shift + Pre Ch	 Left / Vol -	 Vol -
 Recall	 Pre Ch	 Right / Vol +	 Vol +
 Game	 Media	 Red / Zoom	 Red
 Auto	 Smart	 Green / Lan/Audio	 Green
 Info	 Info	 Yellow /	 Yellow

Original	Substituto	Original	Substituto
 MUTE	 MUTE	 TV	 AUX
 MUTE	 MUTE	 DVD	 SAT
 1	 1	 SOUND	 AD
 2	 2	 PICTURE	 ECO
 3	 3	 REPEAT	 ZOOM
 4	 4	 TEXT	 AV
 5	 5	 DUAL	 SUBT
 6	 6	 FORMAT	 3D
 7	 7	 E-MANUAL	 TIMER
 8	 8	 D.MENU	 D.MENU
 9	 9	 TOP MENU	 DISPLAY
 0	 0	 MENU	 INFO
 FAV	 Shift + Pre Ch	 OK	 OK
 Recall	 Pre Ch	 EXIT	 RETURN BACK
 Game	 Media	 HOME	 SMART
 Auto	 Smart	 VOL +	 CH +
 Info	 Info	 APP MEDIA	 CH -
		 VOL -	 Vol -
		 ZOOM	 Red
		 LAN/AUDIO	 Green
		 PLAY/PAUSE	 Yellow



Play/Pause



	Original	Substituto	
	Blue / Text	 D	Blue
	Red / Zoom		Eject
	Green / Lan/Audio		Dual
	Yellow /		Play
	Yellow /		Pause
	Blue / Text		Text
	<< / Tv/Radio		<<
	<< / Tv/Radio		TV/R
	>> / Subtitle		>>
	>> / Subtitle		Subt

Original	Substituto

