



| Original | Substituto | Original | Substituto |
|----------|--------------|----------|-----------------------|
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | Power | | Power |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | TV/R | | TV/Radio / |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | EPG | | Guide / EPG / -/-- |
| | 0 | | 0 |
| | Up / CH+ | | Up |
| | Up / CH+ | | CH+ / Page+ |
| | A/D | | Sound / Title |
| | (<>) L | | Audio / Lang I/II |
| | Left / Vol- | | Left |
| | Left / Vol- | | Vol- |
| | OK | | OK |
| | Right / Vol+ | | Right |
| | Right / Vol+ | | Vol+ |
| | Mute | | Mute / Dimmer |
| | Menu / Setup | | Menu / Home |
| | Menu / Setup | | Setup / OPT / |
| | Down / CH- | | Down |
| | Down / CH- | | CH- / Page- |
| | Audio1 - | | << / Tune- |
| | Audio1 + | | >> / Tune+ |
| | Set / Info | | Info / Angle |
| | Next / ESC | | Exit / Cancel / Clear |
| | Audio2 - | | I<< / Preset- |
| | Audio2 + | | >>I / Preset+ |
| | Down | | Smart / List |





| Original | Substituto | Original | Substituto |
|---------------|---------------------------|----------|------------|
| Stop / Recall | Stop / Hold | | |
| Stop / Recall | Back / Return | | |
| A/B / ADR | Yellow / YouTube / Repeat | | |
| Memo | Fav / Marker / PC | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

