


 




	Original	Substituto		Original	Substituto
	Power		Power		Exit
	Mute		Mute		Up
	1		1		Down
	2		2		Right
	3		3		Left
	4		4		Ok
	5		5		Vol +
	6		6		Vol -
	7		7		Shift + Dual
	8		8		Options
	9		9		Ch +
	0		0		Ch -
	Audio		Dual		Sleep
	Recall		Back		3D
	Tv-Menu		Menu		Shift + Media
	Source		AV		TV/R
	CH.List		List		Text





	Original	Substituto		Original	Substituto
	EPG	GUIDE	Guide		I<<
	FAV	PRE-CH	Pre Ch		>>I
	Info	DISPLAY INFO	Info		Play
	Red	A	Red		Pause
	Green	B	Green		Stop
	Yellow	C	Yellow		Rec/Rep
	Blue	D	Blue		Rec
	Reveal	ZOOM	Eject		
	Hold	E-MANUAL D.MENU	D. Menu		
	List	HOME SMART	Smart		
	Index	SHIFT + DISPLAY INFO	Shift + Info		
	Subpage	SHIFT + AD SUBT	Shift + Subt		
	Size	PICTURE FORMAT	Format		
	MIX	APP MEDIA	Media		
	Subtitle	AD SUBT	Subt		
	<<		<<		
	>>		>>		

