






















































 



 



 










Original	Substituto	Original	Substituto
 Power	 Power	 Digest	 Setup / OPT /
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 1	 1	 EPG	 Guide / EPG / -/-
 2	 2	 Exit	 Exit / Cancel / Clear
 3	 3	 Play	 Play / Slow
 4	 4	 Zoom	 Zoom / Size
 5	 5	 Pause	 Pause / Step / Freeze
 6	 6	 << / Tune-	 << / Tune-
 7	 7	 >> / Tune+	 >> / Tune+
 8	 8	 Rec	 Rec / Rec Mode
 9	 9	 Stop	 Stop / Hold
 0	 0	 UP	 Up
 Info	 Info / Angle	 Down	 Down
 FAV	 Fav / Marker / PC	 Right	 Right
 Page+	 Shift + CH+ /	 Left	 Left
 Page-	 Shift + CH- /	 OK	 OK
 Audio	 Audio / Lang I/II	 CH+	 CH+ / Page+

Original	Substituto	Original	Substituto
 Power	 Mute / Dimmer	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP - FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG I/II	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	
 HOME	 ANGLE	 MENU	 INFO
 OK	 UP	 DOWN	 BACK
 EXIT	 CLEAR	 CANCEL	 LIST
 VOL+	 SMART	 MEDIA	 CH PAGE
 VOL-	 DISPLAY	 TV	 DVD
 1	 VIDEO	 2	 CD - STB
 4	 TAPE	 5	 TUNER
 AUX - HDD	 USB	 7	 BLUETOOTH
 TUNE-	 HDMI - BAT	 8	 PC
 GUIDE EPG	 0	 FAV MARKER	
 NETFLIX	 APP	 YouTube	 Prime Video
 SEARCH	 REPEAT	 REPEAT A-B	 RANDOM



