


 
 




Original	Substituto	Original	Substituto
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	T		Display / Media
	0		0
	List		Smart / List
	Vol+		Vol+
	Info		Info / Angle
	P+		CH+ / Page+
	Vol-		Vol-
	Setup		Setup / OPT /
	P-		CH- / Page-
	Home		Shift + Menu /
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Input		AV / Input / RDS
	Exit		Exit / Cancel / Clear
	Guide		Guide / EPG / -/-
	Text		Text / Goto
	Lang		Audio / Lang I/II
	Subt.		Subtitle / EQ





	Original	Substituto	Original	Substituto
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	<<	 << / Tune-		
	Pause	 Pause / Step / Freeze		
	>>	 >> / Tune+		
	Zoom	 Zoom / Size		
	Play	 Play / Slow		
	Stop	 Stop / Hold		
	Netflix	 Shift + Red / Netflix /		
	Prime Video	 Shift + Blue / Prime		

