













 


 

 
 


 




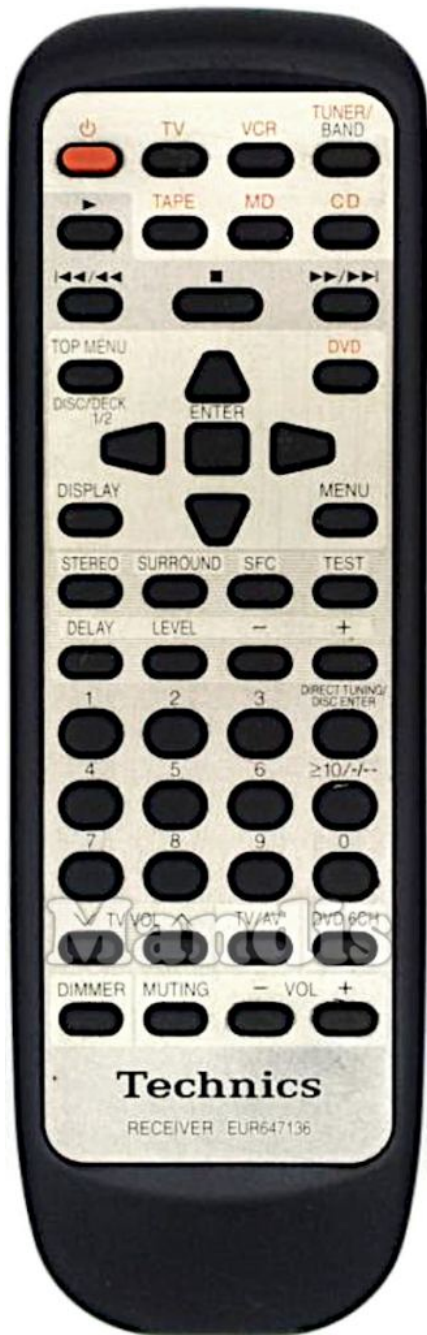 







 
 
 

 
 



 
 



 


 
 

 



Original	Substituto	Original	Substituto
 Power MD	 Power	 Up	 Up
 Direct Tuning	 Text	 Down	 Down
 Dimmer	 Pre Ch	 Right	 Right
 TV	 TV/R	 Left	 Left
 CD	 Yellow	 Enter	 Ok
 DVD	 Blue	 Menu	 D. Menu
 Tuner/Band	 Green	 Display	 Info
 Tape	 Red	 Top Menu/Disc/Deck	 Menu
 VCR	 Smart	 1 MD	 1
 MD	 Media	 2 MD	 2
 Vol+	 Vol +	 3 MD	 3
 Vol-	 Vol -	 4 MD	 4
 Muting	 Mute	 5 MD	 5
 Stop MD	 Stop	 6 MD	 6
 Play MD	 Play	 7 MD	 7
 <</I<< MD	 <<	 8 MD	 8
 >>/>>I MD	 >>	 9 MD	 9





Original	Substituto
 Power DVD	 Power
 TV	 TV/R
 VCR	 Smart
 Tuner/Band	 Green
 Tape	 Red
 MD	 Media
 CD	 Yellow
 DVD	 Blue
 Play DVD	 Play
 I<<</>> DVD	 <<<
 Stop DVD	 Stop
 >>>/<<< DVD	 >>>
 Top Menu/Menu/Disc/Deck	 Menu
 Display	 Info
 Menu	 D. Menu
 Up	 Up
 Down	 Down

Original	Substituto
 Right	 Right
 Left	 Left
 Enter	 Ok
 Stereo	 Dual
 Surround	 Options
 SFC	 Subt
 Test	 Back
 Delay	 Format
 Level	 3D
 +	 Ch +
 -	 Ch -
 1 DVD	 1
 2 DVD	 2
 3 DVD	 3
 4 DVD	 4
 5 DVD	 5
 6 DVD	 6






 



 



 

 

 



 



 
 









 














 







 



 








Original	Substituto
 Power CD	 Power
 TV	 TV/R
 VCR	 Smart
 CD	 Yellow
 DVD	 Blue
 Tape	 Red
 MD	 Media
 Tuner/Band	 Green
 Stop CD	 Stop
 I<</<< CD	 <<
 >>/>>I CD	 >>
 Play CD	 Play
 Menu	 D. Menu
 Display	 Info
 Top Menu/Disc/Deck	 Menu
 Up	 Up
 Down	 Down

Original	Substituto
 Right	 Right
 Left	 Left
 Enter	 Ok
 Stereo	 Dual
 Surround	 Options
 SFC	 Subt
 Test	 Back
 Delay	 Format
 Level	 3D
 +	 Ch +
 -	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Muting	 Mute
 Power Tape	 Shift + Power
 Stop Tape	 Shift + Stop
 Play Tape	 Shift + Play




 
 
 





Original	Substituto	Original	Substituto
 Power VCR	 Power	 5 VCR	 5
 Dimmer	 Pre Ch	 6 VCR	 6
 VCR	 Smart	 7 VCR	 7
 Tape	 Red	 8 VCR	 8
 TV	 TV/R	 9 VCR	 9
 CD	 Yellow	 0 VCR	 0
 DVD	 Blue	 >10/-/- VCR	 Guide
 Tuner/Band	 Green	 Direct Tuning/Disc Enter	 Text
 MD	 Media	 Vol+	 Vol +
 Stop	 Stop	 Vol-	 Vol -
 I<</<<	 <<	 Muting	 Mute
 >>/>>I	 >>	 Up	 Up
 Play	 Play	 Down	 Down
 1 VCR	 1	 Right	 Right
 2 VCR	 2	 Left	 Left
 3 VCR	 3	 Enter	 Ok
 4 VCR	 4	 Top Menu/Disc/Deck	 Menu

1/2





Original	Substituto
 Display	 Info
 Menu	 D. Menu
 Stereo	 Dual
 Surround	 Options
 SFC	 Subt
 Test	 Back
 Delay	 Format
 Level	 3D
 +	 Ch +
 -	 Ch -
 Power Tuner/Band	 Shift + Power
 1 Tuner/Band	 Shift + 1
 2 Tuner/Band	 Shift + 2
 3 Tuner/Band	 Shift + 3
 4 Tuner/Band	 Shift + 4
 5 Tuner/Band	 Shift + 5
 6 Tuner/Band	 Shift + 6

Original	Substituto
 7 Tuner/Band	 Shift + 7
 8 Tuner/Band	 Shift + 8
 9 Tuner/Band	 Shift + 9
 0 Tuner/Band	 Shift + 0
 >10/-/-	 Shift + Guide

