 

 

 

 





 
 

 
 



 



 
 








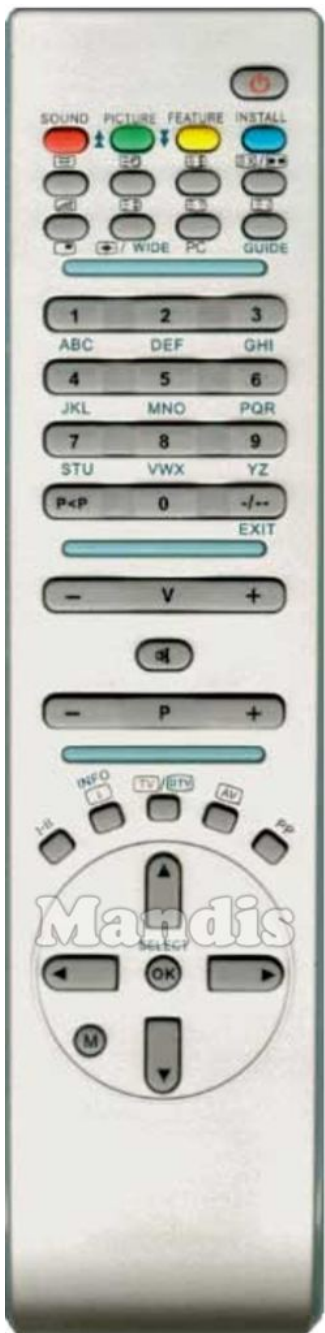 




Original	Substituto
 Power	 Power
 Red/Sound ↑	 Red
 Green/Picture/↓	 Green
 Yellow/Feature	 Yellow
 Blue/Install	 Blue
 [=]	 REPEAT TEXT Text
 [=0]	 SETTINGS OPT Options
 [=+]	 AD SUBT Subt
 [=x]/[· ·]	 PICTURE FORMAT Format
 [/]/[*]	 RETURN BACK Back
 [+](=[◆]/Wide	 ECO 3D 3D
 [=?]/PC	 HOME SMART Smart
 [=i]/Guide	 GUIDE Guide
 1	 1
 2	 2
 3	 3
 4	 4

Original	Substituto
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 P<P	 FAV PRE-CH Pre Ch
 -/--	 SHIFT + GUIDE Shift + Guide
 Vol+	 + VOL Vol +
 Vol-	 VOL - Vol -
 Mute	 MUTE Mute
 P+	 + CH Ch +
 P-	 CH - Ch -
 I-II	 SOUND DUAL Dual
 [i]/Info	 DISPLAY INFO Info
 TV/DTV	 SEARCH TV/R TV/R
 AV	 TIMER AV AV





Original	Substituto	Original	Substituto
	PP		Media
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/Select		Ok
	M		Menu

