



Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/Select		Ok
	M		Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Exit		Guide
	P<P/ Swap		Exit
	Vol +		Pre Ch
	Vol -		Vol +
	P+		Vol -
	P-		Ch +
	PP		Ch -
	I - II		Eject
	Tv/ DTV		Dual
	[≡]		TV/ R
	[≡0]		Text
	AV/ Sour ce		Opt i ons
	[≡+]/ [X]		AV
	[≡X]/ [■]		For mat
	[.≡]/ [■]		3D
			Subt



