

 
 
 







 
 










 
 
 




Original	Substituto	Original	Substituto
 Power	 Power	 16:9	16:9
 Sleep	 Sleep	 Lang	Lang
 Mute	 Mute	 RCL	RCL
 Timer	 AV	 FAV	FAV
 EPI	 Guide	 Page+ / Timeshift	
 SUBTL	 Subt	 Page- / V-Format	
 Audio	 Shift + Dual	 Page- / V-Format	
 1	 1	 Up / CH+	Up
 2	 2	 Up / CH+	Ch +
 3	 3	 Down / CH-	Down
 4	 4	 Down / CH-	Ch -
 5	 5	 Right / Vol+	Right
 6	 6	 Right / Vol+	Vol +
 7	 7	 Left / Vol-	Left
 8	 8	 Left / Vol-	Vol -
 9	 9	 OK	Ok
 0	 0	 Menu	Menu

Original	Substituto	Original	Substituto
 Format	 Format	 Dual	Dual
 Back	 Back	 Pre Ch	Pre Ch
 Shift + Ch +	 Shift + Ch +	 Shift + Ch -	Shift + Ch -
 Shift + Ch -	 Shift + Ch -	 Shift + Format	Shift + Format
 Up	 Up	 Ch +	Ch +
 Down	 Down	 Ch -	Ch -
 Right	 Right	 Vol +	Vol +
 Left	 Left	 Vol -	Vol -
 Ok	 Ok	 Menu	Menu



