



Original	Substituto
	Mute / Dimmer
	Power
	Display / Media
	AV / Input / RDS
	Shift + Pause / Step /
	Exit / Cancel / Clear
	Guide / EPG / -/--
	Text / Goto
	Subtitle / EQ
	Picture / Format
	Setup / OPT /
	Up
	Audio / Lang I/II
	Left
	OK
	Right
	Menu / Home

Original	Substituto
	Down
	Info / Angle
	CH- / Page-
	CH+ / Page+
	Vol-
	Vol+
	Red / Netflix / Search
	Red / List / Page+
	Red / List / Page+
	Smart / List
	Green / APP / Repeat
	Shift + CH- /
	Sound / Title
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	1
	2
	3





Original		Substituto		Original		Substituto	
4	4	4	4				
5	5	5	5				
6	6	6	6				
7	7	7	7				
8	8	8	8				
9	9	9	9				
FAV.	Fav.	PC FAV MARKER	Fav / Marker / PC				
0	0	HDMI-BAT 0	0				
P<P	P<P	RETURN BACK	Back / Return				
Tune-	<<	TUNE-	<< / Tune-				
Tune+	>>	TUNE+	>> / Tune+				
TIMERS	Timers	TIMER SLEEP	Sleep / Timer				
LIB.	Lib.	TOP MENU D.MENU	D.Menu / Top				
Play	Play	SLOW	Play / Slow				
Stop	Stop	HOLD	Stop / Hold				
Pause	Pause	STEP-FREEZE	Pause / Step / Freeze				
Rec	Rec	REC MODE	Rec / Rec Mode				

