 


 

 

 




 

 

 
 

 

 







Original	Substituto
	 Power
	 TV/Radio /
	 AV / Input / RDS
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Exit / Cancel / Clear
	 0
	 Shift + Guide / EPG / -/--
	 Menu / Home

Original	Substituto
	 CH+ / Page+
	 Up
	 Vol+
	 CH- / Page-
	 Left
	 OK
	 Right
	 Vol-
	 Down
	 Info / Angle
	 Audio / Lang I/II
	 Subtitle / EQ
	 Guide / EPG / -/--
	 Text / Goto
	 Fav / Marker / PC
	 Pause / Step / Freeze
	 Shift + 1





Original	Substituto	Original	Substituto
	Power		Power
	Tv/R		TV/Radio /
	Input		AV / Input / RDS
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Exit		Exit / Cancel / Clear
	0		0
	-/--		Shift + Guide / EPG / -/--
	Menu		Menu / Home

Original	Substituto	Original	Substituto
	P+		CH+ / Page+
	Up		Up
	Vol+		Vol+
	P-		CH- / Page-
	Left		Left
	OK		OK
	Right		Right
	Vol-		Vol-
	Down		Down
	i		Info / Angle
	Audio		Audio / Lang I/II
	Sub		Subtitle / EQ
	Guide		Guide / EPG / -/--
	TXT		Text / Goto
	↔		Fav / Marker / PC
	Pause		Pause / Step / Freeze
	F1		Shift + 1



