

 
 
 

 
 
 
 


 



 
 






 
 
 

 



 
 
 

 







 
 

 
 

 
 
 

 
 
 
 
 
 
 
 
 
 

 
 





Original		Substituto		Original		Substituto	
	Power		Power		Info		INFO
	Mute		MUTE		Exit		EXIT
	1		1		Up		UP
	2		2		Down		DOWN
	3		3		Right		RIGHT
	4		4		Left		LEFT
	5		5		OK		OK
	6		6		CH+		CH +
	7		7		CH-		CH -
	8		8		Vol+		VOL +
	9		9		Vol-		VOL -
	0		0		Rec		Rec
	Movie		MEDIA		Stop		Stop
	FAV/Repeat		P/C / FAV		Play		Play
	Menu		MENU		Pause		Pause
	Lang		Audio		I<		First
	EPG		-/- / EPG		I>		Last





Original		Substituto		Original	Substituto
	<</Alt		Rewind		
	>>/List		Fast Forward		
	Red		Red (A)		
	Blue		Blue (D)		
	Green		Green (B)		
	Yellow		Yellow (C)		
	Text		TEXT		
	Tv/Radio		TV/R		
	Audio		OPT+		
	Subt		Subt.		
	Zoom		WIDE		
	Device		SRC		
	Time Shift		V-FOR		
	File		BACK		
	Mosaic		VOD		
	A.Scan/Goto	 + 	Shift + VOD		

