




























 





 





 

 

 

 



 







Original	Substituto	Original	Substituto
PP	PP		Back / Return
	Power		Power
1	1		1
2	2		2
3	3		3
4	4		4
5	5		5
6	6		6
7	7		7
8	8		8
9	9		9
P<P	P<P		Fav / Marker / PC
0	0		0
--	--		Guide / EPG / -/--
	Menu [M]		Menu / Home
	Info [i]		Info / Angle
	I-II		Audio / Lang I/II

Original	Substituto	Original	Substituto
	Mute		Mute / Dimmer
	Left		Left
	Up		Up
	Right		Right
	OK		OK
	Down		Down
	V -		Vol-
	V +		Vol+
	P -		CH- / Page-
	P +		CH+ / Page+
	Red / Sound		Red / Netflix / Search
	Red / Sound		Sound / Title
	Green / Picture		Green / APP / Repeat
	Green / Picture		Picture / Format
	Yellow / Feature		Yellow / YouTube / Repeat
	Blue / Install		Blue / Prime Video / Random
	Text		Text / Goto





	Original	Substituto		Original	Substituto
		[≡o]		Sleep / Timer	
		Hold		Stop / Hold	
		[≡X]		Exit / Cancel / Clear	
		Mix / PIP Swap		Smart / List	
		PIP / Size		Zoom / Size	
		PIP Down / [≡?]		I<< / Preset-	
		PIP Up / Index		>>I / Preset+	
		[TV]		TV/Radio /	
		[AV]		AV / Input / RDS	

