


















Original	Substituto	Original	Substituto
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Up/PR+	 Up
 1	 1	 PR+	 CH+ / Page+
 2	 2	 List	 Smart / List
 3	 3	 Vol-	 Vol-
 4	 4	 Left	 Left
 5	 5	 OK	 OK
 6	 6	 Right	 Right
 7	 7	 Vol+	 Vol+
 8	 8	 Sleep	 Sleep / Timer
 9	 9	 Down/PR-	 Down
 *(Left)	 Shift + Left	 PR-	 CH- / Page-
 0	 0	 P<P	 Back / Return
 *(Right)	 Shift + Right	 Tv/AV	 AV / Input / RDS
 []/Picture	 Picture / Format	 Tv/PC	 TV/Radio /
 /Sound	 Sound / Title	 [<>]/ARC	 Shift + Picture / Format
 I-II	 Audio / Lang I/II	 Red	 Red / Netflix / Search

Original	Substituto	Original	Substituto
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			





Original	Substituto
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [≡]/Text	 Text / Goto
 [≡.]/Mix	 Shift + Text /
 [≡◆]/Size	 Zoom / Size
 [≡i]/Index	 Info / Angle
 [≡x]/Update	 Rec / Rec Mode
 [≡o]/Time	 Pause / Step / Freeze
 [≡?]/Reveal	 Play / Slow
 [≡+]/Hold	 Stop / Hold
 [■]/PIP	 Display / Media
 [:■]/Input	 Shift + AV / Input / RDS
 [/■]/Swap	 Shift + Back / Return
 PIP PR+	 Shift + CH+ /
 [-■]/Position	 Shift + Display / Media
 [≡.]/Mode	 Shift + Smart / List

Original	Substituto
 *(Down)	 Shift + Down
 PIP PR-	 Shift + CH- /

