 

 



 



























 









 







 





 

 

 

 







Original	Substituto	Original	Substituto
	Power		Power
	ATV/DTV		Smart / List
	Tv/DVD		Display / Media
	Eject		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info / Angle
	Mute		Mute / Dimmer
	Tv/Radio		TV/Radio /
	Input		AV / Input / RDS
	Digital Menu		D.Menu / Top
	DVD Menu		Menu / Home
	Top Menu		Shift + D.Menu / Top Menu
	Guide		Guide / EPG / -/-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter/CH List		OK
	Menu/Setup		Setup / OPT /
	Exit/Cancel		Exit / Cancel / Clear
	Return		Back / Return



