 



















 







 







 



 







 


 




















Original	Substituto	Original	Substituto
 Input	 AV / Input / RDS	 ATV/DTV	 TV/Radio /
 Power	 Power	 Vol+	 Vol+
 Fav / Marker / PC	 Fav / Marker / PC	 [≡i]/[i+]	 Info / Angle
 Text	 Text / Goto	 PR+	 CH+ / Page+
 Subtitle	 Subtitle / EQ	 Vol-	 Vol-
 O)/I/II	 Audio / Lang I/II	 Mute	 Mute / Dimmer
 1	 1	 PR-	 CH- / Page-
 2	 2	 Quick	 Smart / List
 3	 3	 Guide	 Guide / EPG / -/-
 4	 4	 Up	 Up
 5	 5	 Exit	 Exit / Cancel / Clear
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 Menu	 Menu / Home
 AD	 Sound / Title	 Down	 Down
 0	 0	 Return	 Back / Return





Original	Substituto	Original	Substituto
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 [=?]	 Display / Media		
 [=+]	 Stop / Hold		
 [=◇]	 Zoom / Size		
 Timer/[=x]	 Sleep / Timer		

