



Original		Substituto		Original		Substituto	
	Standby		Power		Prog-		Ch -
	Open/Close		Eject		Timer Prog		Sleep
	Input Select		AV		Variable Replay		Pre Ch
	HDMI		TV/R		Variable Skip		Shift + Pre Ch
	1		1		Top Menu		Menu
	2		2		Disc Menu		D. Menu
	3		3		Up		Up
	4		4		Left		Left
	5		5		Enter		Ok
	6		6		Right		Right
	7		7		Down		Down
	8		8		Display		Info
	9		9		Return		Shift + Back
	0		0		Mode		Yellow
	Setup		Options		Search		Blue
	Clear		Exit		<<		<<
	Prog+		Ch +		Play		Play





	Original	Substituto		Original	Substituto
	>>		>>		
	l<<		l<<		
	Stop		Stop		
	>>l		>>l		
	Pause		Pause		
	VCR	 + 	Shift + 1		
	HDD	 + 	Shift + 2		
	DVD	 + 	Shift + 3		
	Time Slip	 + 	Shift + Sleep		
	Dubbing		Back		
	Rec Mode	 + 	Shift + Rec		
	Rec		Rec		
	Subtitle		Subt		
	1.3x/0.8x PLY		Format		
	O)/Audio		Dual		
	Sat Link		3D		

