

 

 



 



 

























Original	Substituto	Original	Substituto
	Mute		Mute / Dimmer
	Still		Shift + Pause / Step /
	I/II		Audio / Lang I/II
	Power		Power
	Scan		Smart / List
	Sleep		Sleep / Timer
	PIP		Picture / Format
	Display		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Original	Substituto	Original	Substituto
	TV/AV		AV / Input / RDS
	0		0
	Swap		Back / Return
	P.STD		Setup / OPT /
	S.STD		Sound / Title
	Up		Up
	CH+		CH+ / Page+
	Vol-		Vol-
	Left		Left
	Menu		Menu / Home
	OK		OK
	Right		Right
	Vol+		Vol+
	CH-		CH- / Page-
	Down		Down
	[=]		Text / Goto
	[+]		Subtitle / EQ





Original	Substituto	Original	Substituto
[/ =]	PROGRAM TV/RADIO /		
<</[...]	TUNE- << / Tune-		
>>/[?]	TUNE+ >> / Tune+		
[X]	PC FAV MARKER Fav / Marker / PC		
Red/↑	NETFLIX SEARCH Red / Netflix / Search		
Green/←	APP REPEAT Green / APP / Repeat		
Yellow/→	YouTube REPEAT A-B Yellow / YouTube / Repeat		
Blue/Enter/H.Lock	Prime Video RANDOM Blue / Prime Video / Random		
White/↓/CH.List	GUIDE EPG Guide / EPG / --		
Pause/Timer	STEP-FREEZE Pause / Step / Freeze		
[♦]/Zoom	SIZE ZOOM Zoom / Size		
Exit	CLEAR EXIT CANCEL Exit / Cancel / Clear		

