













 

 



 

 



 

 

 




 





Original	Substituto	Original	Substituto
	POWER		Power
	INFO		Info / Angle
	MUTE		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	SOURCE		AV / Input / RDS
	0		0
	AUDIO		Audio / Lang I/II
	FORMAT		Picture / Format
	BACK		Back / Return

Original	Substituto	Original	Substituto
	MENU		Menu / Home
	EXIT		Exit / Cancel / Clear
	UP		Up
	LEFT		Left
	ENTER		OK
	RIGHT		Right
	VOL+		Vol+
	DOWN		Down
	CH+		CH+ / Page+
	VOL-		Vol-
	CH-		CH- / Page-
	LIST		Smart / List
	SLEEP		Sleep / Timer
	EPG		Guide / EPG / -/-
	FAV		Fav / Marker / PC
	<<		<< / Tune-
	RED		Red / Netflix / Search





	Original	Substituto	Original	Substituto
		>>		>> / Tune+
		GREEN		Green / APP / Repeat
		I<<		I<< / Preset-
		YELLOW		Yellow / YouTube / Repeat
		BLUE		Blue / Prime Video / Random
		>>I		>>I / Preset+
		PLAY		Play / Slow
		PAUSE		Pause / Step / Freeze
		TEXT		Text / Goto
		STOP		Stop / Hold
		SUBTITLE		Subtitle / EQ
		RADIO		TV/Radio /
		OPT		Setup / OPT /
		DMP		Display / Media
		INDEX		D.Menu / Top
		REC		Rec / Rec Mode

